

PICTURE ONE ►

Acculock adjuster with bolts and washers used to fasten the adjuster through the cradle bottom into the playfield




PICTURE TWO ▼

AccuLock adjuster bolted in place. Make sure the playfield is centered in the cradle and then finger tighten all three bolts to hold the adjuster to the cradle and playfield. Notice, there is a gap in the center of the adjuster between the bottom of the cradle and the adjuster.



PICTURE THREE ▼

AccuLock adjuster installed. Tighten the two outside bolts until they are snug and then tighten the center bolt until the gap disappears. DO NOT OVER TIGHTEN BOLTS.

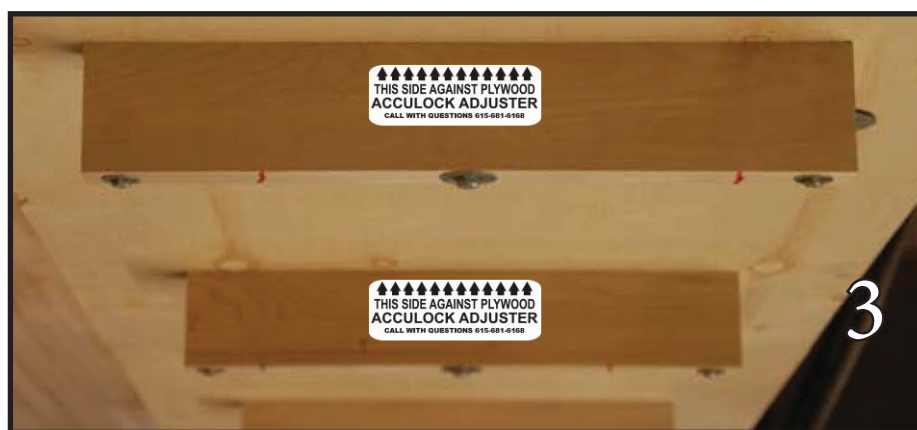

Call 615-681-6618 if you have any questions

Olhausen Billiards · 1124 Vaughn Parkway · Portland · TN · 37148 (615)916-5497 (615)323-7585 Fax

Accu-Lock®

- ▶ Low Center “Concave” Playfield Adjustment Instructions
- ▶ Push your center bolt (5” for wood adjuster, 4” for metal adjuster) into the center hole of the adjuster
- ▶ Take 3/8” nut and screw it down to just above the top of the adjuster
- ▶ Screw center bolt into the board insert with some slack enough to line up the outside bolts
- ▶ Place the 1/2” shims on the outside of the outer adjuster bolts. Tighten them to snug. Do not over tighten these bolts
- ▶ With the 9/16” open end wrench on the nut above the center adjuster and a 9/16” socket on the head of the center bolt, hold the center bolt in place while tightening the nut above the adjuster. This will add pressure to the playfield and lift the center to the desired height and level for accurate play. (This may need to be re-adjusted from time to time to ensure flatness).

Please call Donny Olhausen with any questions 615.681.6168

