


ASSEMBLY INSTRUCTIONS

INTERNAL POCKET RAIL ASSEMBLY

- 1** REMOVE THE NUTS AND BOLTS THAT HAVE BEEN TEMPORARILY ATTACHED TO THE METAL BRACKETS INSTALLED ON THE CORNER POCKET RAIL.

ALIGNMENT
TABS

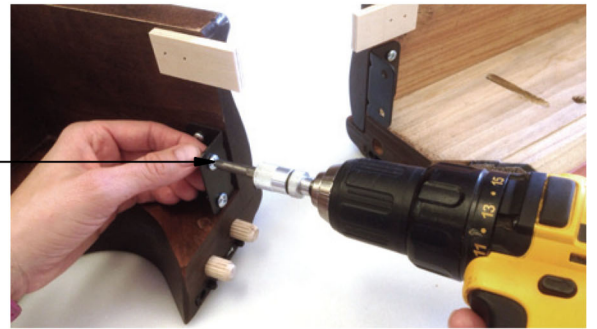

- 2** ALIGN THE DOWELS IN THE CORNER POCKET RAIL WITH THE DOWEL HOLES ON THE STRAIGHT RAIL. PRESS TOGETHER BY HAND. THE WOOD TABS WILL HELP TO ALIGN THE BLINDS.

ALIGNMENT
DOWELS



- 3** USE THE ALLEN WRENCH PROVIDED TO TIGHTEN THE RAIL LOCK FASTENER. SIMPLY INSERT THE ALLEN KEY INTO THE ACCESS HOLE ON THE CORNER RAIL AND TURN CLOCKWISE 90DEG. DO NOT OVERTIGHTEN.

ACCESS HOLE
FOR RAIL LOCK
FASTENER



- 4** USE THE NUTS AND BOLTS REMOVED DURING STEP 1 TO FASTEN THE METAL BRACKETS TOGETHER. THIS WILL CLOSE THE GAP BETWEEN THE CORNER RAIL AND THE STRAIGHT RAIL AND PROVIDE A STRONG CONNECTION.



- 5** REPEAT STEPS 1-4 TO COMPLETE THE ASSEMBLY OF THE INTERNAL POCKET RAIL SET.

